

# User Manual: Snap-Off Knife

## Product Overview

The snap-off knife is a versatile cutting tool designed for precision and convenience. It features a retractable blade with segmented sections that can be snapped off to reveal a fresh, sharp edge. Ideal for cutting paper, cardboard, plastic, and other light materials, this tool is commonly used in offices, workshops, and for DIY projects.

---

## Safety Information

- **Always handle the knife with care.**
  - **Keep out of reach of children.**
  - **Wear protective gloves and eyewear when using the knife.**
  - **Cut away from your body and keep fingers clear of the blade.**
  - **Dispose of used blade segments safely.**
- 

## Parts Description

1. **Blade:** Segmented for easy snapping; retractable for safety.
  2. **Blade Slider:** Moves the blade in and out of the handle.
  3. **Handle:** Ergonomically designed for a comfortable grip.
  4. **Blade Lock:** Secures the blade in the desired position.
  5. **Blade Dispenser:** Holds spare blades for easy access.
- 

## Instructions for Use

### 1. Extending the Blade

- Hold the handle firmly.
- Slide the blade slider forward to extend the blade to the desired length.
- Lock the blade in place using the blade lock (if available).

### 2. Cutting

- Place the material to be cut on a stable surface.
- Hold the knife at a slight angle.
- Apply gentle, even pressure while cutting.
- For thicker materials, make several passes rather than forcing the blade.

### 3. Snapping Off a Dull Blade Segment

- Retract the blade until only one segment extends from the handle.
- Use a plier or similar to grip the dull blade segment firmly.
- Hold the knife firmly and bend the blade downward to snap off the dull segment.
- Dispose of the used segment in a safe container.

### 4. Retracting the Blade

- After use, slide the blade back into the handle.
  - Ensure the blade is fully retracted and locked before storing.
- 

### Maintenance

- Clean the blade and handle regularly to remove debris.
  - Replace the blade when all segments have been used.
  - Store the knife in a dry place, away from moisture.
- 

### Troubleshooting

Issue	Solution
Blade does not extend/retract	Check for obstructions; clean the slider.
Blade is loose	Ensure the blade lock is engaged.
Blade does not snap cleanly	Hold the blade firmly with a plier or similar and ensure only one segment is exposed.

---

### Disposal

Dispose of used blades and the knife according to local regulations. Use a blade disposal container to prevent injury.

---

### Warranty & Support

For customer support, please contact your retailer or visit our website.

---

**Stay safe and enjoy precise cutting with your snap-off knife!**