

# User Manual: Hultafors ATLE Nail Puller

## Product Overview

The Hultafors ATLE Nail Puller is a robust, professional-grade tool designed for efficient removal of nails from wood and other materials. Its forged steel construction and ergonomic handle provide durability, power, and comfort, making it ideal for carpenters, builders, and DIY enthusiasts.

---

## Safety Information

- **Always wear safety goggles when using the nail puller.**
  - **Inspect the tool before each use for damage or excessive wear.**
  - **Keep hands and fingers clear of the pulling mechanism and nail path.**
  - **Ensure your working area is stable and free from obstructions.**
  - **Keep bystanders, especially children, at a safe distance.**
  - **Do not use the tool for prying or striking tasks it is not designed for.**
- 

## Parts Description

1. **Jaw/Claw:** The gripping end that locks onto the nail head or shaft.
  2. **Handle:** Ergonomically designed for a secure and comfortable grip, providing leverage for pulling nails.
  3. **Pivot Point:** Allows for efficient leverage and controlled nail removal.
- 

## Instructions for Use


### 1. Inspection Before Use

- Check the jaw/claw for cracks, chips, or deformation.
- Ensure the handle is intact and securely attached.
- Remove any oil, grease, or moisture from the handle to prevent slipping.

### 2. Using the Nail Puller

- Place the jaw/claw over the exposed nail head or shaft.
- If the nail head is buried or flush to the wood strike the top of the ATLE with a hammer. The jaws should dig down below the nail head.
- Place the hammer claw on the screw on the top or on the side of the ATLE.
- Pull with the hammer in the same direction as the pivot leg. The jaw will grip the screw harder the more you pull thanks to the smart design.

- Pull the handle back slowly to extract the nail.
- For deeply embedded nails, you may need to reposition the tool and repeat the process.

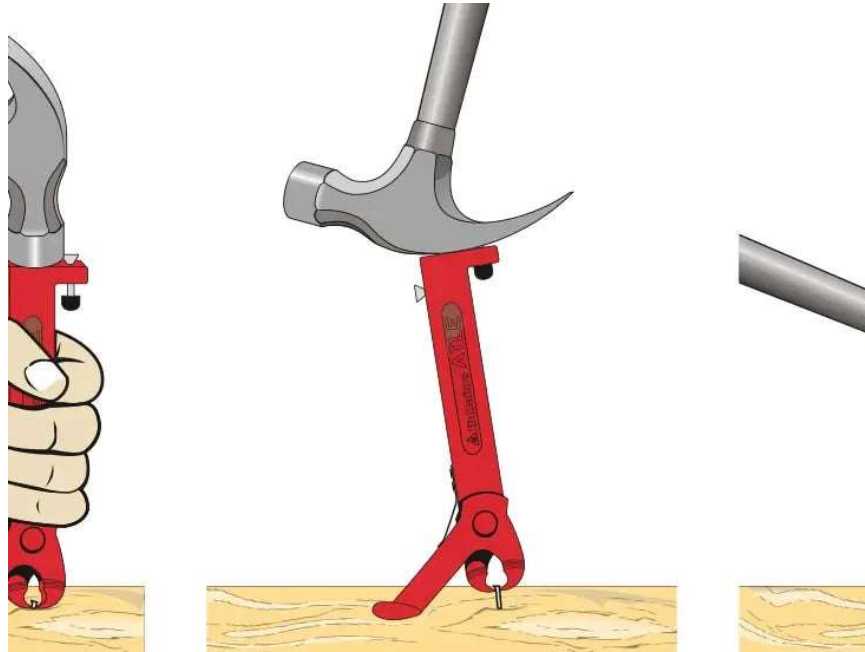

#### 4. After Use

- Remove any debris from the tool.
- Wipe the tool clean and dry to prevent rust or corrosion.
- Store the nail puller in a dry place, away from moisture and extreme temperatures.

---

#### Maintenance

- Regularly inspect the tool for wear or damage.
  - Clean the tool after each use.
  - Apply a light coat of oil to the metal parts if storing for an extended period.
  - Replace the tool if the jaw/claw or handle becomes damaged.
-

## Troubleshooting

<b>Issue</b>	<b>Solution</b>
Jaw/claw is chipped or bent	Replace the tool for safety and effectiveness.
Handle is cracked or loose	Replace the tool immediately.
Nail slips from jaw/claw	Ensure proper positioning and grip; clean the jaw/claw if dirty.

---

## Disposal

Dispose of the tool according to local regulations. Steel parts may be recyclable in some areas.

---

## Warranty & Support

For more information and customer support, please contact your retailer or visit the Hultafors website.

---

**Use your Hultafors ATLE Nail Puller safely and responsibly for efficient and long-lasting performance!**