

User manual

Voltage tester

The voltages specified on the voltage tester are rated voltages. The voltage tester may be used only for the specified voltage or for the specified voltage range. • A proper indication is guaranteed only at temperatures from -10 to +50 °C and at frequencies from 50 to 500 Hz. • The visibility of the indication can be impaired under unfavourable illumination conditions, e.g. in sunlight, in unfavourable locations, e.g. on wooden ladders or insulating floors, and in alternating voltage supply networks which are not consistently earthed. • The voltage tester must be checked for proper functioning before use. • The voltage tester must not be used when exposed to meteorological precipitation such as dew or rain. • Voltage testers with screwdriver blade may be used only for voltage testing, but not for other work on live components. • Damaged voltage testers whose function and/or safety is evidently impaired must not be used.

